



ArmourScan Quick Start Guide

The TekVisions ArmourScan requires no additional drivers or software.

The ArmourScan is ready to use as a Titan Left or Right Pin Pad.

Each Pin Pad is marked on the back label:


Titan Left

or

Titan Right



The Titan software mode must be set for buffered to work with
The Titan Left and Right ArmourScan.

To enable buffering, you must press the "Mode" key in the main
POS screen.

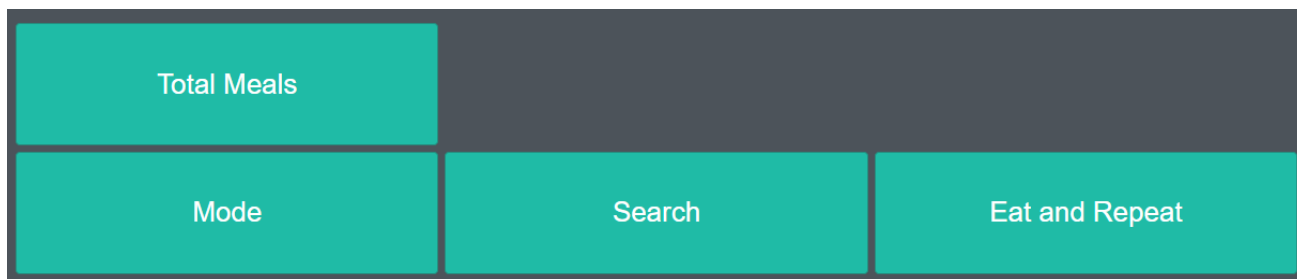

Then select "Buffered".

Serving Mode

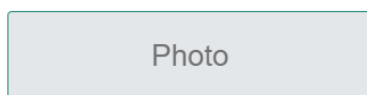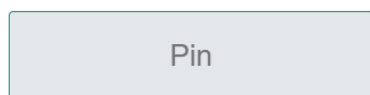



Menu Settings

Settings Menu	Available Settings
Hold F1 key and plug in USB cable F2 scrolls through available settings 1 adjusts settings down, 3 adjusts settings up "Enter" saves and exits settings	LCD Contrast and Backlight Beeper Pitch, Volume and Duration LCD Character Masking

Instructions for Cleaning the ArmourScan

For Cleaning the TekVisions ArmourScan we recommend: Dampen a clean, non-abrasive cloth with 60-71% Isopropyl Alcohol

NO Bleach

NO Ammonia

NO Alcohol Over 71%

(These may damage the number pad)

For additional questions or support please contact our technical support department:

Fred Meyerhofer

support@tekvisions.com - 800.827.0127